



Removal

- 1 Detach intake hose at air filter.
- 2 Remove air filter cover.
- 3 Unscrew vacuum line (2) for vacuum pump.
On vehicles up to model year 1979 only.
- 4 Remove crankcase ventilation pipe (3).
- 5 Release hose clip (arrow) at intake line (4).

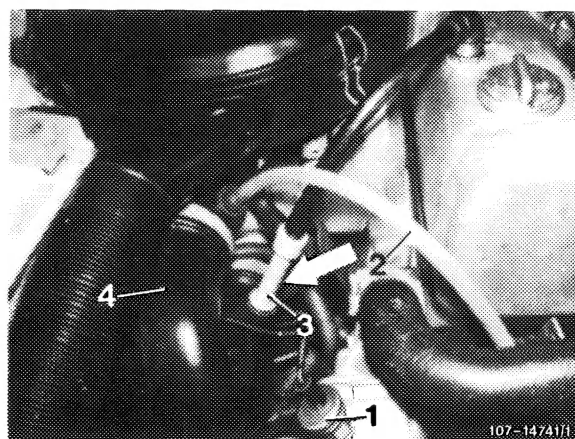


- 6 Unscrew fastening nuts inside air filter housing and withdraw air filter.

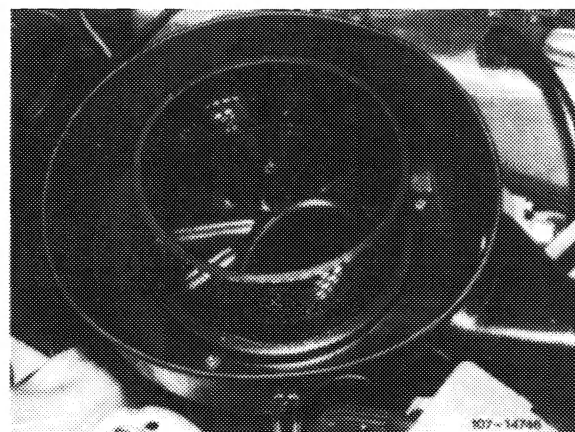

Installation

- 7 Install in reverse order, making sure that rubber ring is correctly seated at turbocharger flange.

Model 116, 126

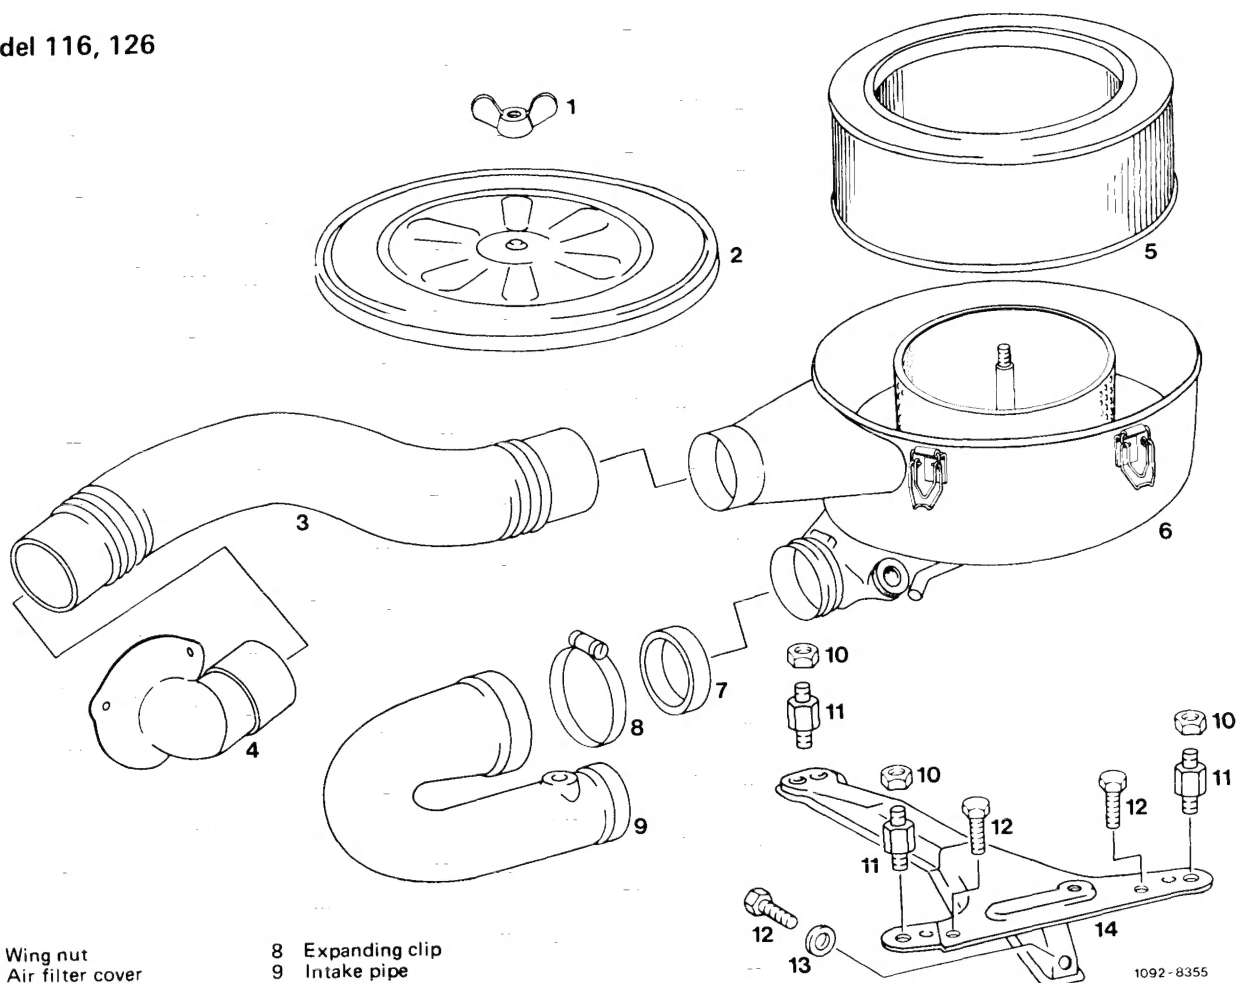

Model 123

